

beurer

MP 60



GB Manicure/Pedicure set Instruction for Use

BEURER GmbH + Co. KG • Söflinger Str. 218 • 89077 Ulm (Germany)
Tel.: 0731 / 39 89-144 • Fax: 0731 / 39 89-255
www.beurer.de • Mail: kd@beurer.de



IMPORTANT SAFETY INSTRUCTIONS

Dear Customer,

We are very pleased that you have decided in favor of a product from our range. Our name stands for high quality and thoroughly tested products in the fields of heat, gentle therapy, blood pressure/ diagnosis, weight, massage and air. Please read these instructions for use carefully and comply with the directions.

With best regards

Your Beurer Team

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

1. Important notes

Read through these instructions for use carefully before first use. Keep them to hand for later use and ensure that they are accessible to other users.

DANGER:

- Always unplug this appliance immediately after using.
- Do not use the instrument when bathing or showering. Do not store or keep the instrument in places from where it could fall into a bath or wash basin.
- Never immerse the instrument in water or other liquids.
- If the instrument has dropped into water, unplug the plug-in power unit immediately.
- Ensure your hands are dry before handling either the instrument or the plug-in power unit.
- Do not pull on the power cord or instrument to unplug the plug-in power unit from the socket outlet.

WARNING:

- During use, considerable heat may be experienced on the skin.
- During treatment, check the results regularly. This applies particularly in the case of diabetics, since they are less sensitive to pain and more susceptible to injury. The three attachments supplied with the base unit MP 60 are basically suitable for diabetics. Nevertheless, do not use high speed and work particularly carefully. Ask your doctor in case of doubt and when using other attachments in the upgrade set.
- This instrument must be used only for the purpose for which it has been developed, and in the manner described in the instructions for use. Any improper use can be dangerous.
- In case of prolonged intensive use (e.g. milling of dead skin from your feet) the device might get very hot. In order to prevent skin burns in these situations, there should be longer breaks between each application. For your own safety, constantly monitor heat build up in the device. This particularly applies to people who are insensitive to heat.
- The device is only for private use and is not intended for medical or commercial purposes.
- The manager is not responsible for damage or injury caused by improper or incorrect use.
- Ensure before use that there is no visible damage to the instrument and accessories. In the event of doubt, do not use them and contact your dealer or the customer service address stated.

- The appliance must be checked frequently for signs of wear or damage. If such signs are present, or if the appliance has been used improperly, it must be taken to either the manufacturer or the dealer before further use.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and/or repair.
- Switch off the instrument immediately in the event of defects or malfunctions.
- Repairs may be carried out only by the customer service or authorized dealers.
- On no account try to repair the instrument yourself!
- Use the instrument only with the accessories provided.
- Never leave the instrument unattended when it is in operation.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Keep the instrument away from children to prevent any possible danger.
- Keep the instrument away from sources of heat.
- Do not use the instrument under blankets, pillows etc.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
- The instrument must not be operated continuously for longer than 15 minutes. After this time, wait an interval of at least 30 minutes to prevent the motor from overheating.
- The plug-in power unit must be operated only from a power supply as specified on it.
- If the power supply is damaged, don't use the adaptor anymore!
- Never use while sleeping.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

2. Commencing operation

2.1 Information concerning the instrument

This manicure and pedicure instrument is equipped with high-quality attachments. The basic version includes three attachments with long-life sapphire coating or polishing felt. This, together with the smooth speed control and clockwise/anticlockwise running, allows professional foot and nail care such as is otherwise possible only from a chiropodist.

Individual treatments can be provided and the highest demands met with a Profiset with an additional six attachments in extremely high quality long-life versions. This upgrade set can be integrated without problem in the MP 60 instrument case. You have the best equipment with the MP 60 instrument and the MP 60 professional set attachments. This can otherwise be offered only by a professional chiropodist.

2.2 Power supply

To ensure adequate power at all times for good and powerful treatment of the feet and nails, this instrument is provided with a permanently attached power unit.

3. Application

3.1 General

- This instrument is intended only for the treatment of hands (manicure) and feet (pedicure).
- Select an attachment and push it onto the instrument spindle using a slight pressure. The attachments can be heard to engage. To remove: pull the attachment and instrument apart in the axial direction (straight).


- Switch on the instrument by sliding the slide switch to the left (anticlockwise running) or to the right (clockwise running). The two buttons marked with plus (+) and minus (-) allow you to select the speed of rotation. Start every application at low speed and increase it only as required.
- All file and cutting attachments are coated with a sapphire grain. This guarantees extremely long life and almost guarantees freedom from wear.
- Do not exert heavy pressure and always guide the attachments carefully over the surface to be treated.
- Move the instrument under light pressure in circular movements slowly over the parts to be treated.
- Note that the cutting attachments will have a reduced effect if the skin is softened or moist. For this reason, do not carry out any pretreatment in a bath.
- Do not remove all the callus skin in order to retain the natural protection of the skin.
- Always ensure that the spindle can rotate freely. It must never be permanently jammed, otherwise the instrument will become too hot and suffer damage.
- After every use, apply moisturizing cream to the parts treated.

Important:

Check the results during treatment. This is particularly important for diabetics, since their hands and feet are less sensitive.

3.2 Attachments

The following three attachments are included in the basic equipment:

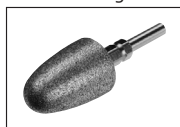

A – Sapphire cone

Removal of dry skin or calluses from the soles of the feet and from the heels and for manicuring the nails.



B – Felt cone

Smoothing and polishing the edge of the nail after filing as well as for cleaning the nail surface. Always polish in circular movements and do not allow the felt cone to rest in one place, otherwise friction could cause heat to develop.



C – Sapphire disk, fine

Filing and treatment of the nails, fine grained sapphire disk.

The specific aspect of this sapphire disk is that only the inner disk rotates, while the outer support is stationary. This enables precise filing of the nails without the risk of burning the skin with the fast rotating disk.


With the upgrade Profiset you have six additional attachments available:

Since these involve Profi attachments, we would ask you to proceed with caution when using the additional attachments, since incorrect use could lead to injury. Exercise particular caution at higher speeds.



D – Cylindrical milling cutter

Grinding of lignified foot nail surfaces as well as smoothing of these. For this purpose, apply the milling cutter horizontally to the nail surface and remove the unwanted layer of nail using slow circular movements.

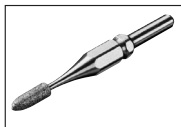

E – Flame milling cutter

For removing ingrowing nails. Carefully guide the flame cutter up to the part to be treated and remove parts of the nail as necessary.



F – Sapphire milling cutter, round

This accessory attachment is for the careful removal of corns. When using this attachment, please remember when removing the layer of skin from the corn that you will quickly penetrate deeper into the skin and this could injure the periosteum.



G – Needle milling cutter

The needle milling cutter is a precision tool. Please proceed cautiously when using this attachment, since careless use can quickly cause injury.

It can be used to free ingrown nails and cut away dead nail parts. Use the needle milling cutter at low speed.



H – Sapphire cone, long and coarse

Fast removal of thick or large calluses on the soles and heels. This attachment is intended for large areas.



I – Sapphire disk, coarse

Filing and treatment of the nails, coarse grain sapphire disk. This attachment allows you to shorten even thick nails by filing. Since it quickly removes large areas of the nail, you should proceed with caution in this case also.

When filing, always work from the outside of the nail towards the tip!

Always check results regularly during treatment. As soon as the application becomes unpleasant, stop the treatment.

4. Cleaning and storage

Before cleaning the power unit, always unplug it from the socket outlet!

- Clean the instrument with a slightly moistened cloth. You can also moisten the cloth with mild soap suds to remove more stubborn dirt.
- If necessary, for reasons of hygiene, the attachments can be cleaned with a cloth or brush moistened with alcohol. Dry them carefully afterwards.
- Do not drop the instrument.
- Make sure that no water enters the instrument. But if this should happen, do not use the instrument again until it is completely dry.
- Do not use chemical detergent or scouring agents for cleaning.
- Never immerse the instrument or plug-in power unit in water or other liquids.

Specific Instructions Storage and Care for appliance and cord:

- The product is supplied with a suitable pouch for storing while the appliance is not in use.
- The pouch has a designated space to store the appliance when the appliance is not in use. Please store the appliance in this place.
- The pouch also has a designated space for storing the cord. Please store the cord in the for the cord intended place. Do not bend the cord. Treat the power cord with care.

- While the appliance is in use, please take care about the cord. Take care the rotating attachments do not come in contact with the cord. It may cause damage on the cord's surface. Please always check the cord if there is a visible damage on the cord. If so, please contact a service center for examination and/or repair.

5. Technical data

Power unit voltage Input: 230 V AC / 50 Hz
 Output: 21 V DC / 200 mA
Speed: 1400 r.p.m.–6500 r.p.m.

Power unit voltage Input: 120 V AC / 60 Hz
 Output: 20 V DC / 200 mA
Speed: 1400 r.p.m.–6500 r.p.m.

6. Disposal

Please dispose of the device in accordance with the directive 2002/96/EG – WEEE (Waste Electrical and Electronic Equipment). If you have any queries, please refer to the local authorities responsible for waste disposal.



