

# Instructions for Nail Glide® 2100

## Professional Electric File

The Nail Glide 2100 is a very safe instrument when used properly. Please familiarize yourself with the operational procedures to ensure optimum results.

- The Nail Glide 2100, when used with the correct Burrs and Bits, is the ideal machine for the trained professional.
- The Nail Glide 2100 utilizes a powerful variable speed electric motor capable of 30,000 revolutions per minute.
- Filing Attachment Burrs and Bits are available through your local dealer or by contacting Medicoool at the address below. Proper hygiene practices recommend that all Bits are sanitized after use. Medicoool recommends use of the Bit Sanitizer which is distributed by Medicoool and comes complete with a disinfectant solution to properly sanitize your Bits.

### ONE-YEAR LIMITED WARRANTY

The following warranty policy applies to the original purchaser of this product. Please complete the enclosed Warranty Registration Card and mail it to MEDICOOL within ten days of your purchase. Your Nail Glide 2100 has a one-year warranty from date of purchase. If at any time during the warranty period your Nail Glide 2100 fails to function properly (except for obvious abuse), Medicoool at its option will replace it with a repaired, rebuilt or new Nail Glide 2100 machine.

**Proof of purchase and our return authorization number is required for all warranty repair.**

Before returning your Nail Glide 2100 for repair, contact Medicoool's Customer Service at 800-433-2469 and an authorization number will be assigned. This number must be placed on the outside of the return box in plain sight. **DO NOT RETURN** the machine without an authorization number, or it will be refused and returned to you! Returned products must be accompanied with a payment of \$10 to cover our return shipping and handling.

Medicoool accepts no responsibility for items returned without authorization or that have been packaged improperly for shipment. Medicoool reserves the right to make appropriate repairs and bill the customer for any repairs considered not covered by Medicoool's Warranty.

### IMPORTANT SAFEGUARDS

Read all instructions carefully before using this product.

**DANGER!** To reduce risk of electrocution:

- Plug this instrument into the proper electrical outlet. Never force the plug into an outlet.
- Do not use the instrument while bathing or washing.
- Never place or store the instrument where it can fall or be pulled into a tub, sink or toilet.
- Never reach for an appliance that has fallen into water. Unplug it immediately before retrieval of unit.
- Never submerge the unit or converter in water or any other liquid.

**WARNING!** To reduce the risk of burns, electrocution, fire or injury:


- Do not operate the instrument if it has a damaged cord or plug, if it is not working properly, or if it is immersed in water.
- Do not excessively bend or pull the cord. Unplug the cord by grasping the plug—not the cord. Keep the cord away from heated surfaces.

This product is designed for human manicure and pedicure ONLY. Do NOT use the instrument for any other purpose.

SAVE THESE INSTRUCTIONS FOR  
FUTURE REFERENCE.



# Nail Glide 2100

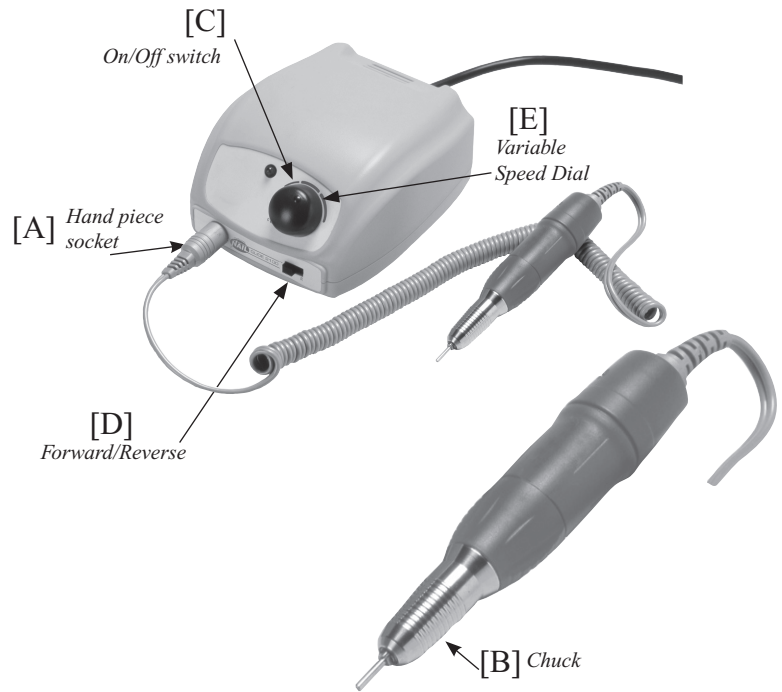

### INSTRUCTIONS FOR MEDICOOL'S NAIL GLIDE 2100

The Nail Glide 2100 is a high quality electric file designed for professional use only. This machine should only be used by Podiatrists, trained foot care professionals, and licensed Nail Technicians while working with acrylics, wraps, gels and sculptured nails. Use with Medicoool's precision attachments (burrs and bits with a 3/32" shaft) to insure proper function and to protect your warranty.

1. Plug the electric cable coming from the back of the base unit into an electrical wall socket.
2. Plug the hand piece plug into the front of the base unit (Fig A).
3. With the machine turned OFF choose an appropriate bit. Open the chuck by twisting the chuck release (Fig B) in a counter clockwise direction. Insert a 3/32" bit firmly into the front of the chuck. Close and secure the bit by twisting the chuck clockwise thus locking the bit into position. **Never** switch the machine on without a bit in the chuck, this will burn out the motor and the warranty is void if this happens. Always leave a bit (or the dummy shaft that shipped with the Nail Glide 2100) locked in the chuck to avoid burning out the motor. Never force any bit into the chuck. Proper 3/32" bits will fit perfectly into the chuck without having to apply excessive force! To remove the bit, turn the machine off and twist the chuck counter clockwise to release the bit. Remember...do not switch the machine on without a bit locked in the chuck.
4. Select forward or reverse direction—this selection is made by moving the switch to Forward or Reverse position. (Fig D) (Forward rotates the bit clockwise and Reverse rotates it counter clockwise). Make sure the switch on the back of the machine is set on the Hand Symbol (left side) when you are not using the Foot pedal. Turn the On/Off switch, which is also the Speed Dial (Fig E), to the required speed and begin filing.
5. Push the Foot Pedal Switch on the back of the machine to the Foot Pedal Symbol (right side). Turn On/Off -Speed Dial Switch (Fig E) to the desired speed, press down on the foot pedal and begin filing.
6. IMPORTANT! NEVER switch the Nail Glide 2100 on without a bit securely locked in the chuck!

**MEDICOOL, INC.**

20460 Gramercy Pl • Torrance, CA 90501

(800)433-2469

www.medicoool.com